

Notes for Ross control of Eagle PT-101(or any Eagle head) along with Eagle controller

PT-101 head runs off of 24 VDC power; internal regulator in PT head provides 12 VDC to power camera
PT-101 head can be configured for either RS-485 serial or RS-232 serial control; camera control commands are split out from head to camera via control and power cable (included)

Lens control commands are sent from head to lens, using cable built into lens
Ross switchers constantly "poll" data line, so Eagle PT-MP-1 multiplexer must be used to prevent data packet "crashes" when used in parallel with Eagle controller. If Ross is only control method used, PT-MP-1 is not required

